

Model: GP-MNP-300-3 www.telesin.cn


# **3M Carbon Fiber Selfie Stick**

## **Disclaimer**


Please read this statement carefully and by using this product you will be deemed to have acknowledged and accepted it in full. Please check the product carefully before each use and do not use it if damaged or deformed. By using this product, you acknowledge and agree that you are fully responsible for your actions and the possible consequences of using this product. You undertake to use this product only for legitimate and lawful purposes. You understand and agree that Telesin Digital Co., Ltd ("Telesin") shall not be liable for any misuse, adverse effects, damages, injuries, penalties or other legal consequences arising directly or indirectly from the use of this product. The user should follow the precautions including but not limited to those mentioned herein. To the extent Telesin reserves the right to interpret and modify this commitment within the limits of national laws and regulations.


#### How to use

1 Hold the top of the selfie stick and stretch it upwards

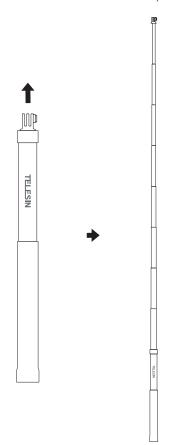

2 When closing, please loosen pole first and then shrink downward

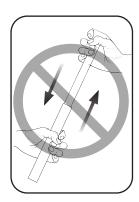

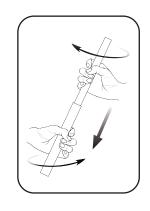


When close the selfie pole, please twist the pole clockwise and close it section by section.Do not use too much strength to avoid pinching your hands.

## Product length adjustment


#### 8-segment retractableExplore moreshooting perspectives

Full length 44cm to 300cm, each section canbe freely locked between, different height, different beauty.

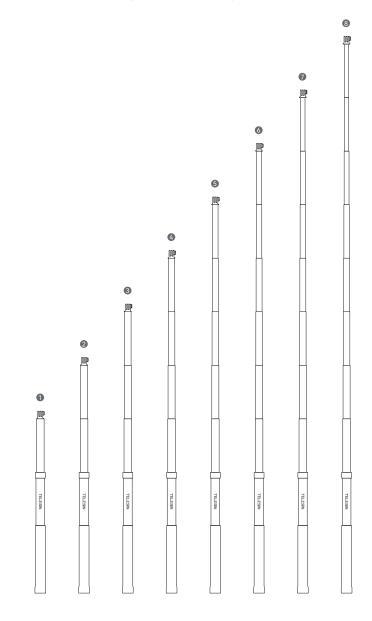


## Rotating locking design

Lock the selfie bar as shown below after stretching (440mm - 3000mm), when storing then turn in theopposite direction to unlock, please do not hit backdirectly to avoid cracking the bar.

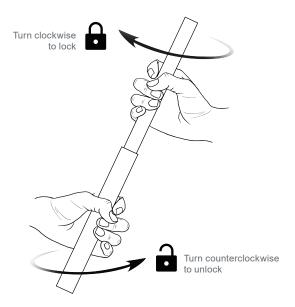

### Tripod in one piece

 1/4 threaded port on the bottomof the selfie stick for attaching a tripod base



#### **Precautions**

- 1. Do not close directly when closing the shaft, to rotate to withdraw, beware of pinching hands.
- 2. Do not shake the telescopic pole to prevent the telescopic pole from extending twice.
- 3. The surface of the selfie stick is wrapped with a scratch-resistant webbing, and the material is made of carbon fiber
- 4. Do not use in thunderstorms.
- 5. Do not touch the power supply.
- 6. After entering the sea or having dust in, pleaserinse it with water and dry it.







