


CHARGE+

30WFAST CHARGER

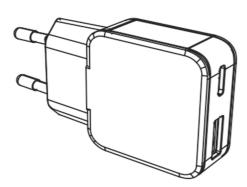

USER MANUAL

Thank you for choosing this MOJOGEAR charger. In this user manual you'll find all the relevant information to use your charger.

For information in other languages, please visit:





 
www.mojogear.eu/manuals

Contents

- 1. How to use
- 2. Box contents
- 3. Technical details
- 4. Safety instructions
- 5. About MOJOGEAR

1. How to use

- 1. Connect one or more charging cables. You can use the USB-C port ① and the USB-A port ②.
- 2. Plug the charger into a wall socket ③.
- Connect the other end of the charging cable to your smartphone or other device.



2. Box contents

- Charger
- Manual

3. Technical details

Name: MOJOGEAR Charge+ 30W PD

GaN Fast Charger

Model: MG-C03

Input (EU Plug): 100-240V~50/60Hz 0.8A USB-C Output: 5V=3A 9V=3A 12V=2.5A

15V=2A 20V=1.5A (30W max)

USB-A Output: 5V=3A 9V=2A

12V=1.5A (18W max)

USB-C+USB-A Output: 5V=3A Total Output: 30W













4. Safety instructions

- Don't drop, disassemble or mechanically abuse the charger.
- Don't attempt to repair the charger by yourself.
- Avoid exposure to water or high humidity.
- Don't expose to excessive heat.
- Don't use near flammable gases.
- Keep out of reach of children.

5. About MOJOGEAR



MOJOGEAR develops high-quality products for smartphone filmmakers, mobile creators and everyone else who wants to get the most out of their phone or camera. MOJOGEAR is proudly based in The Netherlands.

All MOJOGEAR products are covered by a 2-year warranty.

If you have any questions or feedback, please let us know at **support@mojogear.eu**.
We'd love to hear from you!