

整体尺寸：296x42mm (折三次)
折好尺寸：74x42mm 材质：105克双铜纸

(印刷正面)


MOJOGEAR

MINI XL

MANUAL

USB-C PD  Quick Charge 3.0 20000 mAh

Overview

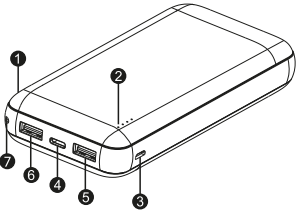

1. Power button
2. LED power indicator
3. Micro USB Input
4. USB-C Input/Output
5. USB Output 1 (QC 3.0)
6. USB Output 2 (QC 3.0)
7. Lanyard hole

How to charge the power bank

There are two ways to charge the power bank:

1. Use the included USB-C cable to charge via the USB-C port on the front.
2. Use a Micro USB cable to charge via the Micro USB port on the side of the power bank.

Connect the charging cable to a USB outlet (wall charger, laptop). To achieve maximum charging speed, we advise to use a USB outlet and cable that supports 18W fast charging. Depending on the charging speed, it can take 5 to 16 hours to fully charge the power bank.

How to charge your devices

Connect a charging cable to the USB or USB-C port on the power bank. For devices with a USB-C port, you can use the included cable.

To use Quick Charge or fast charging via USB-C Power Delivery, please use a supported charging cable. When Quick Charge is active, one of the LED indicators will be green.

You can charge up to three devices simultaneously, using both USB ports and the USB-C port.

(折好正面)

(折好背面)

(印刷反面)

Power button & indicator

Press the power button to turn on the power bank and to check the remaining battery power.

Press the power button twice to turn off the power bank.

Power Indicator	One light on	Two lights on	Three lights on	Four lights on
Battery status	≤ 25%	25% ~ 50%	50% ~ 75%	75% ~ 100%

Technical details

Name	MOJOGEAR MINI XL EXTRA FAST 20000 mAh
Size	138 x 68 x 27 mm
Model	MG-09 P162
Battery	Lithium polymer battery
Micro Input	DC 5V-2A / 9V-2A
USB-C Input	DC 5V-2A / 9V-2A
USB-C Output	DC 5V-3A / 9V-2A / 12V-1.5A (Power Delivery 3.0)
USB Output 1-2	DC 5V-3A / 9V-2A / 12V-1.5A (Quick Charge 3.0)
Battery capacity	20000 mAh / 74Wh
Efficiency	85%
Execution standard	GB/T35590 - 2017

Safety instructions

- Do not use near explosive gases or flammable materials.
- Do not expose to excessive heat, such as sunshine or fire. Avoid abrupt changes in temperature.
- Do not use or store in humid or wet conditions.
- Do not throw, shake, vibrate, drop, crush or mechanically abuse the power bank.
- Do not burn or incinerate.
- Do not cover with objects which may affect the heat dissipation.
- Avoid contact with battery chemicals.
- Keep out of reach of children

MOJOGEAR

MOJOGEAR develops high-quality products for smartphone filmmakers, mobile journalists and everyone else who wants to get the most out of their phone or camera. MOJOGEAR is proudly based in The Netherlands.

All MOJOGEAR products are covered by a 2-year warranty.

If you have any questions or feedback, please let us know at support@mojogear.eu. We'd love to hear from you!