


MOJOGEAR**EVO XL**

MANUAL

For information
in other languages,
please visit:



www.mojogear.eu/manuals

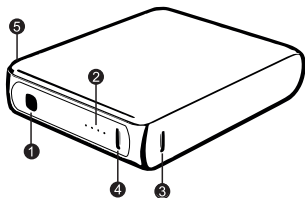

Overview

1. Power button
2. LED power indicator
3. USB-C Input/Output 1
4. USB-C Input/Output 2
5. USB Output

How to charge the power bank

Use the included USB-C cable to charge via one of the USB-C ports. Connect the charging cable to a USB outlet (wall charger, laptop).

To achieve maximum charging speed, we advise to use a USB outlet and cable that supports 18W fast charging. Depending on the charging speed, it can take 5 to 16 hours to fully charge the power bank.

How to charge your devices

Connect a charging cable to the USB or USB-C port on the power bank. For devices with a USB-C port, you can use the included cable.

To use Quick Charge or fast charging via USB-C Power Delivery, please use a supported charging cable. You can charge up to three devices simultaneously, using both USB-C ports and the USB port.

Power button & indicator

- The power bank will turn on and off automatically.
- Press the power button to check the remaining battery power and to turn on the power bank when it's turned off.
- Press the power button twice to turn off the power bank manually.
- Hold the power button for 10 seconds to reset the power bank. Afterwards, please charge the power bank before using it again.
- When being charged, one of the LED lights will blink.
- When all 4 lights are continuously on, the power bank is fully charged.
- When fast charging is active, the bottom light will turn green.

Technical details

Name	MOJOGEAR MG-PB6 EVO XL 20000mAh
Size	103.0 x 78.8 x 25.0 mm
Weight	334g
Battery	High Density Lithium Ion
USB-C Inputs	DC 5V-3A / 9V-2A / 12V-1.5A
USB-C Outputs	DC 5V-3A / 9V-2.22A / 12V-1.66A (Power Delivery 3.0)
USB Output	DC 5V-3A / 9V-2A / 10V-2.25A / 12V-1.5A (Quick Charge 3.0)
Battery capacity	20000 mAh / 74Wh     

Safety instructions

- Do not use near explosive gases or flammable materials.
- Do not expose to excessive heat, such as sunshine or fire. Avoid abrupt changes in temperature.
- Do not use or store in humid or wet conditions.
- Do not throw, shake, vibrate, drop, crush or mechanically abuse the power bank.
- Do not burn or incinerate.
- Do not cover with objects which may affect the heat dissipation.
- Avoid contact with battery chemicals.
- Keep out of reach of children

MOJOGEAR

MOJOGEAR develops high-quality products for smartphone filmmakers, mobile creators and everyone else who wants to get the most out of their phone or camera. MOJOGEAR is proudly based in The Netherlands.

All MOJOGEAR products are covered by a 2-year warranty.

If you have any questions or feedback, please let us know at support@mojogear.eu. We'd love to hear from you!