 
 
 
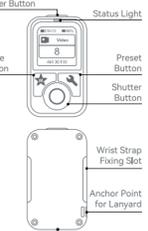
 
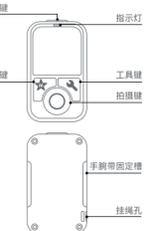


1. 包装盒尺寸允许误差范围±1mm。
2. 模切整齐，无爆边，无皱角，爆角。
3. 印刷清晰，颜色准确，无色系偏差，无墨点，脏污，允许走位±1.5mm。
4. 粘贴位齐平，无残胶，溢胶。
5. 划痕允许范围：A级面：无触感L≤20mm，w≤0.5mm，QTY≤1mm可接受，B级面：无触感L≤30mm，w≤1mm，QTY≤2mm可接受。

1. 外箱/纸板未注公差: ±3mm
2. 彩盒纸类未注公差: ±1mm
3. 吸塑未注公差: ±0.5mm
4. 丝印/雕刻纸板未注公差: ±0.2mm
5. 泡棉未注公差: ±0.5mm
6. 布包未注公差: ±1mm

|  |  |  |   |  |   |   |   |  |
|--|--|--|---|--|---|---|---|--|
| <p>TELESIN</p> <p>For Hero 12/11/10/9/8/MAX</p> <p><b>Camera Remote Control</b></p> <p>T12遥控器</p> <p>User Guide / 使用说明</p> | <p><b>Wearing The Remote</b></p> <p>1. Thread the strap through the slots on the back of the remote.</p>  <p>2. Position the remote along the strap as shown.</p>  | <p>3. Thread the end of the strap through the underside of the plastic ring.</p>  <p>4. Fold the strap back onto itself and use the hook and loop fasteners to secure the strap. Fold any excess strap back onto itself for added security.</p>  | <p><b>The Basics</b></p>  | <p><b>How to use</b></p> <p><b>Powering On/Off</b><br/>Press and hold the power button for 3 seconds to power on/off.</p>  <p><b>Language Settings</b><br/>Press the Mode button  to select the previous one] or the Preset button  to select the next one]. Press the Shutter button  to enter] or the power button  to return].</p> <p><b>Pairing</b><br/>1. Press the power button to enter "settings" pairing new device.</p>  | <p>2. Press the Shutter button to enter pairing mode. The remote control automatically searches for and connects to the nearest device.</p>  <p>3. Finally press the power button to return.</p> <p><b>Camera Settings</b><br/>Press the mode button  to cycle] to the mode that you want.<br/>Press and hold the mode button for 4 seconds  to deep/reset] the camera.<br/>Press the Preset button  to see all the presets for the selected mode].</p> <p><b>Start Capturing</b><br/>Press the Shutter button  to start capturing]. Mark location moments by pressing the Mode button  for the remote] during recording.<br/>When the connected camera is ready, press the Shutter button  to turn on the camera] and start capturing.<br/>Press the Shutter button  to end].</p> | <p><b>Charging</b><br/>Plug the charging cable into the charging slot. Connect the other end of the cable to a computer or other USB power source.</p>  <p>Charging Time: 1.5h<br/>Usage Time: 5h</p> <p>* Please keep the charging cable away from metal objects to prevent fire caused by short circuit when charging, the screen lights up and the power indicator starts to work.</p> <p><b>Disclaimer</b><br/>Please read this statement carefully and by using this product you will be deemed to have acknowledged and accepted it in full. Please check the product carefully before each use and do not use it if damaged or deformed. By using this product, you acknowledge and agree that you are fully responsible for your actions and the possible consequences of using this product. You undertake to use this product only for legitimate and lawful purposes. You understand and agree that "Telesin" shall not be liable for any misuse, adverse effects, damages, injuries, penalties or other legal consequences arising directly or</p> | <p>indirectly from the use of this product. The user should follow the precautions including but not limited to those mentioned herein. To the extent Telesin reserves the right to interpret and modify this commitment within the limits of national laws and regulations.</p> <p><b>FCC Caution</b><br/>15.19 Labeling requirements.<br/>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>15.21 Information to user.<br/>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>15.105 Information to the user.<br/>Note: This equipment has been tested and found to comply with the limit for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful</p> | <p>interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:<br/>-Reorient or relocate the receiving antenna.<br/>-Increase the separation between the equipment and receiver.<br/>-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.<br/>-Consult the dealer or an experienced radio/TV technician for help.</p> <p>* RF warning for Portable device:<br/>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>  |
|--|--|--|---|--|---|---|---|--|

|                        |   |   |   |  |   |  |   |
|------------------------|---|---|---|--|---|--|---|
| <p>www.telesin.com</p> | <p><b>佩戴示意</b></p> <p>1. 将搭带穿过遥控器背面的槽位。</p>  <p>2. 沿搭带调整遥控器(如图所示)。</p>  | <p>3. 将搭带的一端穿过塑料环的底部。</p>  <p>4. 将搭带折回，并使用搭带固定器固定搭带，将所有多余的搭带折回，以增强安全性。</p>  | <p><b>功能概括</b></p>  | <p><b>使用方法</b></p> <p><b>开机/关机</b><br/>长按3秒电源键，遥控器开机/关机。</p>  <p><b>语言设置</b><br/>按压模式键  【选择上一个】<br/>按压工具键  【选择下一个】<br/>按压拍摄键  【进入】<br/>按压电源键  【返回】</p> <p><b>配对</b><br/>1. 按压电源键进入设置，选择配对新设备。</p>  | <p>2. 按压拍摄键进入配对模式，遥控器自动搜索并连接附近的设备。</p>  <p>3. 按压电源键返回。</p> <p><b>相机设置</b><br/>按压模式键  【切换】相机延时、录像或拍照模式<br/>长按模式键4秒  【休眠/唤醒相机】<br/>按压工具键  【进入于拍摄模式列表】</p> <p><b>开始拍摄</b><br/>按压拍摄键  【开始拍摄】<br/>连续时按压模式键  【收藏】精彩时刻<br/>【打开相机】并拍摄<br/>再按压拍摄键  【结束】拍摄</p> | <p><b>充电</b><br/>打开防水盖，将充电线插入遥控器，然后将USB端口插到手机充电器的USB口上进行充电。<br/>充电时间: 1.5h<br/>使用时间: 5h</p>  <p>* 请将充电设备远离易燃易爆物品，以防短路和火灾。<br/>充电时，屏幕亮起，电源指示灯开始工作。</p> | <p><b>免责声明</b><br/>请仔细阅读本声明，一旦使用本产品，即视为对本声明的全部认可和接受。每次使用前，请仔细检查产品，若出现破损、变形、请勿使用。使用本产品，就意味着您认可并同意，您将对本使用产品的行为和可能产生的后果全部责任。您承诺您会出于正当合法的目的使用本产品，您理解并同意，对于直接间接使用本产品而造成的违约、不作为、损害、伤害、惩罚或其他法律后果，泰迅数码有限公司(以下简称"Telesin")将不承担任何责任。用户应遵循包括但不限于本文提及的使用注意事项，在国家法律法规范围内，本承诺解释权、修改权归 Telesin 所有。</p> |
|------------------------|---|---|---|--|---|--|---|